

MOP BUCKET

**AVAILABLE WITH
DOWN PRESS & SIDE PRESS
WRINGER**

AVAILABLE IN TWO OPTIONS:
Available in both down press and side press options to meet different needs

STANDARD CAPACITY:
The 32- 35 quart bucket allows for compatibility with any mops under 32 oz in size

BUILT TO LAST:
A corrosion resistant handle and hardware ensure durability and a prolonged service life even in challenging environments



SMOOTH MOBILITY:
Equipped with 3" gray casters for an effortless glide across any surface, providing greater maneuverability and protecting floors from scuffs and marks

**PICTURED HERE IS OUR
DOWN PRESS MODEL

NEW FROM TOLCO

FINDING THE BEST FIT



SIDE PRESS

Our side press wringer applies pressure evenly across the mop head, enabling efficient liquid extraction with little effort. A widely popular style among JanSan professionals, this wringer offers high-performing value in a familiar design.

 


DOWN PRESS

Our down press wringer prioritizes user-friendliness and ease. An up and down motion allows for greater leverage from users with less effort expelled, reducing fatigue in comparison to a side press mechanism.

REPLACEMENT PARTS AVAILABLE AS NEEDED:

#280601
280606

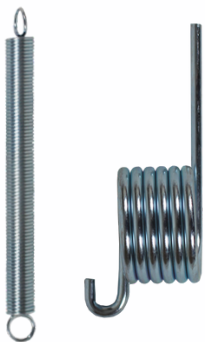

SPRINGS

#280602
280607



HANDLE

#280603
280608



WHEEL CASTERS

#280604
250609



WRINGERS

INSTRUCTIONS & USE



Tolco's Mop Buckets are designed for professional and commercial cleaning environments, offering an efficient solution for floor maintenance. To ensure optimal performance and longevity, users should follow these guidelines:

Preparation: Before use, ensure the mop bucket is clean and free from debris. Fill the bucket with the appropriate cleaning solution, following the manufacturer's recommendations for dilution ratios.

Mopping: Submerge the mop into the cleaning solution and then place it into the wringer. Press down on the wringer lever firmly but gently to squeeze out excess liquid from the mop. Adjust the pressure applied based on the desired mop dampness for your specific cleaning task.

Mobility: Utilize the mop bucket's non-marking swivel casters to easily move the unit across various surfaces without causing scuffs or marks. For best maneuverability, ensure the path is clear of obstacles and debris.

Maintenance: After each use, thoroughly rinse the mop bucket and wringer with clean water. Dry the components to prevent the buildup of mold and mildew. Regularly inspect the casters and wringer mechanism for wear and tear, replacing parts as necessary to maintain optimal performance.

**PICTURED HERE IS OUR
SIDE PRESS MODEL



Removing the Wringer:

- Grasp the wringer basket with one hand.
- With the other hand, press down on the container unit.
- While maintaining pressure, pull the wringer basket straight upwards to detach it from the container.

Reassembling the Wringer:

- Align the grooves on the wringer basket with the corresponding grooves on the container unit.
- Hold the wringer basket at a 45-degree angle, with the bottom of the basket pointing upwards towards the container.
- At this slanted angle, gently slide the wringer basket downwards into the container until it fits into place.

DOWN PRESS

Item Number	280600
Item Size (LxWxH)	20" x 16" x 13"
Item Weight (LBS.)	12.70

SIDE PRESS

Item Number	280605
Item Size	23" x 14.75" x 25.25"
Item Weight	13.60

Case Count	1
Country of Origin	China